

Call Transfer Setting Instruction

1. Automatically transfer to Preset transferred number

Operation instruction: after turning on the device and working well, then you can pick up the handset or press hand-free; after hearing the dial tone, you can enter into **setting mode** by pressing ***1**3**, after heard long-tone “toot”, then you can go ahead input the command as you need (see the following command list). After finished setting, you can press ***002*#** to exit.

NO.	Item	Command	Remark	Default setting
1	Incoming numbers to GSM(FWT) permitted to transfer	*075*(number)#	Can set 20 phone numbers; the length of each phone number is within 16 digits.	Blank
2	Set transferred number when GSM(FWT) incoming call	*076*(number)#	Can set 1 phone number; the length of each phone number is within 16 digits.	Blank
3	Set transferred number when PSTN(FWT) incoming call	*077*(number)#	Can set 1 phone number; the length of each phone number is within 16 digits.	Blank
4	Set overtime after asking second dial when PSTN(FWT) incoming call	*074*10-60#	unit: seconds	20

2. Call transfer switch on/off setting. After switch on, then it can proceed second dialing after connection

Operation instruction: do not need enter into setting mode, it can input following command directly after pick up hand set.

NO.	Command	Item	LED status
1	*#10#	Switch off transfer function for GSM(FWT) incoming call	N/A
2	*#11#	Switch on transfer function for GSM(FWT) incoming call	LED5 Flashes with 1Hz.
3	*#20#	Switch off transfer function for PSTN(FWT) incoming call	N/A
4	*#21#	Switch on transfer function for PSTN(FWT) incoming call	LED4 flashes with 1Hz..
5	*#30#	Switch off transfer function for GSM&PSTN(FWT) incoming call	N/A
6	*#31#	Switch on transfer function for GSM&PSTN(FWT) incoming call	LED4 and LED5 flash with 1Hz.